

**MS1200 SWR MEYER ANALYZER****TABLE OF CONTENTS**

**Warning: READ SECTION 2.0 BEFORE ATTEMPTING TO USE THIS PRODUCT.**

**INTRODUCTION 1.0 DESCRIPTION****MS1200 SWR MEYER ANALYZER****TABLE OF CONTENTS**

**Warning: READ SECTION 2.0 BEFORE ATTEMPTING TO USE THIS PRODUCT.**

**1.0 INTRODUCTION 1.0 DESCRIPTION**

1.1 Typical Use	2
1.2 Frequency Range	3
1.3 A Quick Word About Accuracy	3

**2.0 POWER SOURCES** **8**

2.1 External Power Supply	4
2.2 Using Internal Batteries	5
2.2.1 Using Rechargeable AA Type Batteries	5
2.4 Using conventional AA/AAA/B Batteries	6
2.5 Blasting "VOLTAGE LOW" display warning	10
2.6 "Power Saving Mode" (Sleep mode)	8

**3.0 MAIN MENU AND DISPLAY** **7**

3.1 General Connection Guidelines	7
3.2 Power-up Display	7
3.3 Menu Mode Descriptions (SW Functions Only)	8
3.4 USB Operation	

**4.0 MAIN (or Operating) MENU** **10**

4.1 General Connection Guidelines	10
4.2 MEYER Menu mode	
4.2.1 Antenna system SWR	11
4.2.2 Coax Loss	11
4.2.3 Capacitance	16
4.2.4 Inductance	17
4.2.5 Frequency Counter	17
4.3 USB Menu mode	
4.3.1 Antenna system SWR (USB)	
4.3.2 Coax Loss (USB)	

**5.0 ADVANCED OPERATIONS** **18**

5.1 Forward	18
5.2 Accuracy Advanced mode	17
5.3 General Connection Guidelines	17
5.4 Advanced 1	18
5.4.1 MEYER Advanced 1	
5.4.1.1 Magnitude and Phase of Load Impedance	19
5.4.1.2 Series Equivalent Impedance	19
5.4.1.3 Parallel Equivalent Impedance	19